
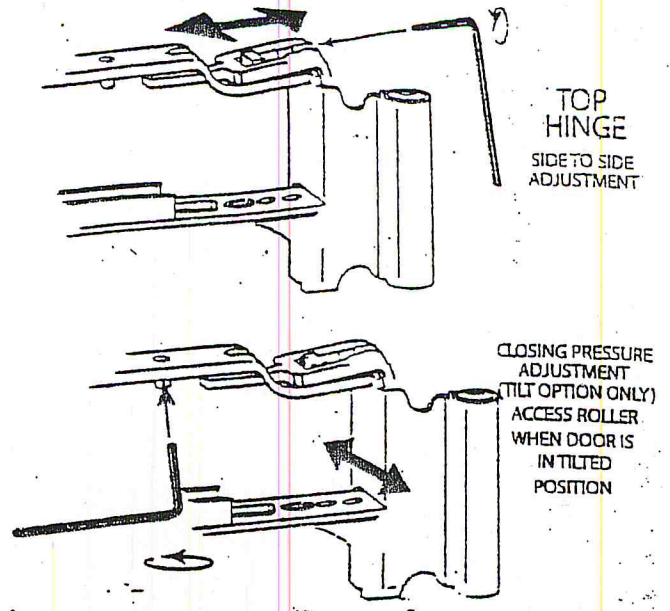




Hinge Adjustments and Hardware Maintenance

Note: Door comes from factory with preadjusted hinges. Adjust door, if needed, only after checking door is level, plumb and square.


ADJUSTMENTS

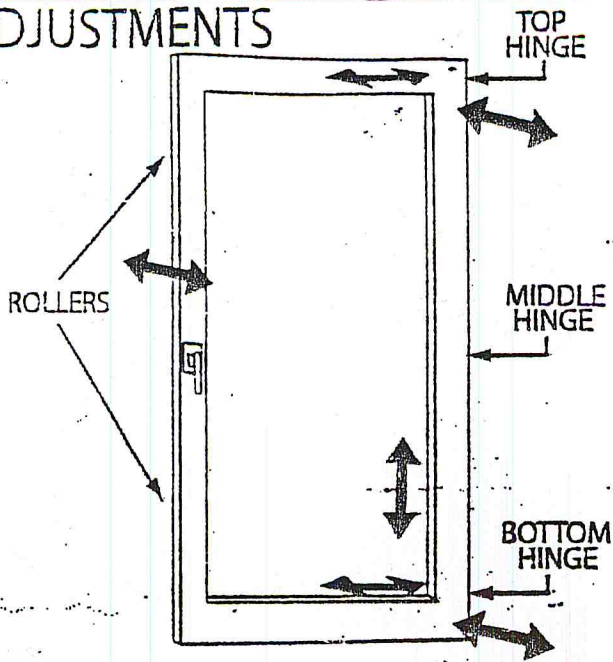

MIDDLE HINGE
(TILT DOES NOT HAVE MIDDLE HINGE)
LOOSEN TWO SCREWS TO ALLOW FREE MOVEMENT OF OTHER HINGES.

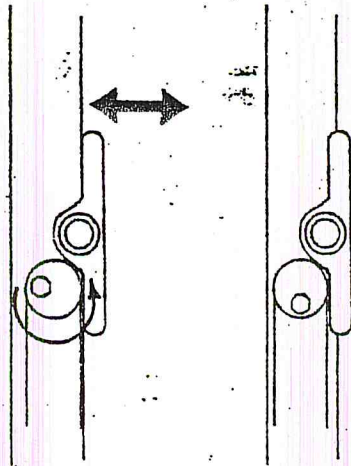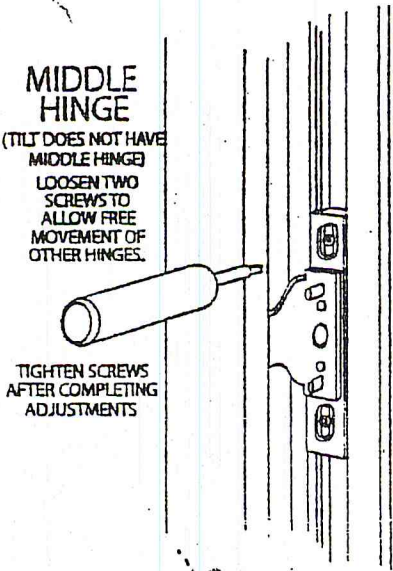


ROLLERS
CLOSING PRESSURE ADJUSTMENTS

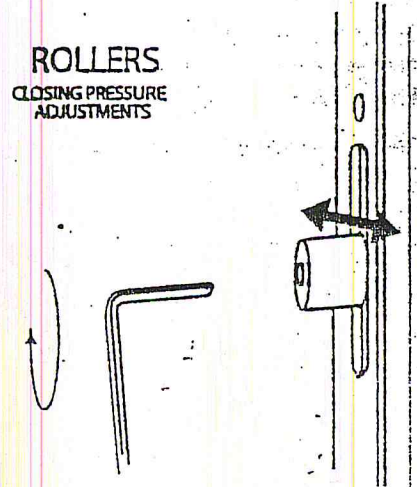


BOTTOM HINGE
HEIGHT ADJUSTMENT

NOTE: REMOVE HINGE COVER AND PLUG TO ACCESS ADJUSTING SCREWS.

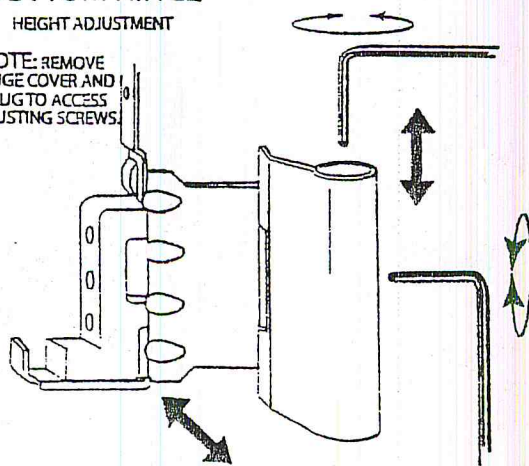

SIDE TO SIDE ADJUSTMENT

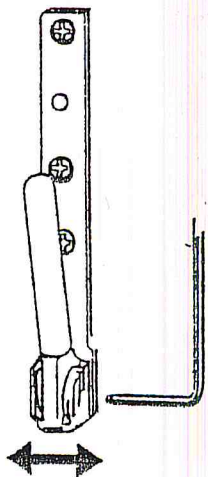

MAINTENANCE

